




Locking the Lid

Rotate lid to lock and ensure it is child-safe.

Fitting the 3P Filter Collector

Push the green spiral hose on to the hoesail and secure with jubilee clip provided. Fit the other end on to the smallest Filter Collector outlet.

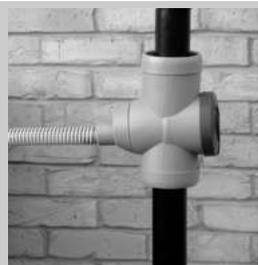

To fill the Rustico, we recommend using the optional 3P Filter Collector Universal.

Where the water butt cannot be located within 30 cm of the down pipe, longer Universal Long Link Kits are available online (Art. No. 9000123U, U2, to U5).

If in any doubt during installation, please consult a professional tradesman.

Instruction sheet

3P Rustico 275 litres

www.3ptechnikuk.com





Setting Up

Site the butt on a firm, level surface adjacent to your down-pipe.

Refer to your down-pipe diverter instructions.

You may choose whether to fit the supplied tap, or not.

Fitting the tap (optional)



1. Locate the Tap-point (Optional)

You do not have to install a tap. The Tuscan can be used by plunging a watering can into the water. To find the tap point, locate a flat, circular area of the water-butt around 300 mm from the bottom.



2. Hole cutter selection - 28 mm

Select the 28 mm flat bit from the set provided. Please double check the size before continuing.



3. Drilling

Offer the drill to the centre of the tap point and mark if necessary. Carefully proceed to drill the hole with the 28 mm flat bit.



4. Attach tap and back-nut

Push the tap through the hole and screw the back-nut into place.

Attaching an optional 3P Filter Collector Universal



1. Marking Out

Measure down 70 mm from the lip of the water butt. This should be a point well away from either of the two bayonet lid locking positions.

This position is ideal for all connections at 32 mm (DN32, 1 1/4") or less.



2.1 Hole Cutter Selection - 32 mm

To fill the water butt with the recommended 3P Filter Collector Universal, select the 32 mm flat bit from the set provided.

2.2 Other Diverters & Connectors

Refer to your diverter's instructions for the correct sized hole to form. You *may* be able to use the flat bit supplied by 3P. Check your own diverter's instructions before proceeding.



3. Drilling

Offer the drill to the marked point, proceed to drill the hole at 32 mm (or at your selected holes size for your connection set). Check and re-check you are going to drill the correct size of hole for the connection set that you are using.



4. Attaching a Back-Nut & Hose Tail

A back nut and rubber seal can be fitted as shown. Hold the back-nut and rubber seal in position and screw in the hoesetail.



5. Hosetail in Position

This picture shows a 1" BSP thread - 32 mm hosetail in position (within a 32 mm drilled hole).